

# Limit Switch Box (EX-900) Explosion Proof (Ex d II C T6 IP67)



\* Thank you for using Radius L.L.C. product. This Manual has been written with the objective of user convenience. Please do not make modifications to any such information, unless otherwise arranged.

#### General

RADIUS Limit Switch box has been designed to install easily as well as for accurate monitoring and viewing the conditions of valve and actuator. Please be sure to read this manual carefully and thoroughly prior to installation and operation.

1

Rev 00 30116



## **Product Specification**

| Model                  | RX-900-0                                   | RX-900-1           | RX-900-2           | RX-900-3                 | RX-900-4 | RX-900-5 | RX-900-6 |  |  |
|------------------------|--|--------------------|--------------------|--------------------------|----------|----------|----------|--|--|
| Ambient<br>Temperature | -4°F ~ 185°F                               |                    |                    |                          |          |          |          |  |  |
| Cable Entry            | 2 – ¾" NPT                                 |                    |                    |                          |          |          |          |  |  |
| Terminal<br>Block      | 8 ~ 12 Point                               |                    |                    |                          |          |          |          |  |  |
| Position<br>Indicator  | 0° ~ 90° (Red for Close / Yellow for Open) |                    |                    |                          |          |          |          |  |  |
| Switch Type            | 2SPDT                                      | Proximity<br>(PNP) | Proximity<br>(NPN) | Proximity<br>(DC 2 Wire) | 3SPDT    | 4SPDT    | 2DPDT    |  |  |
| Painting               | Black Polyester Powder Coating             |                    |                    |                          |          |          |          |  |  |
| Bracket                | Steel (AB1 OR AB2)                         |                    |                    |                          |          |          |          |  |  |
| Enclosure              | Ex d II C T6 (IP67)                        |                    |                    |                          |          |          |          |  |  |

## **Mounting Bracket**


| Model             |        | Material  | Size (Width * Length * height)<br>(mm) |  |  |
|-------------------|--------|-----------|--|--|--|
| AB1<br>(Standard) | of the | Stainless | 30 * 80 * 20                           |  |  |
| AB2               |        | Stainless | 30 * 130 * 30                          |  |  |

Rev 00 30116




## **Wiring Schematics**


### EX-900-0

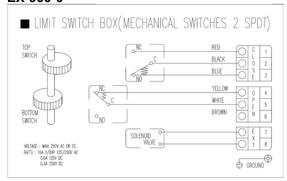


#### EX-900-4

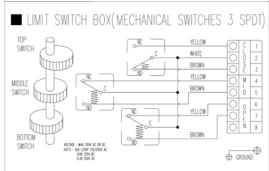


#### EX-900-1

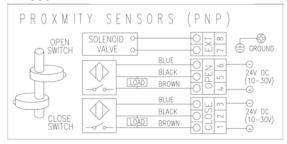


#### EX-900-5

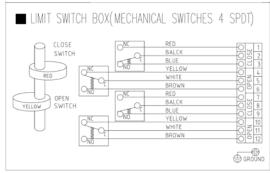


#### EX-900-2

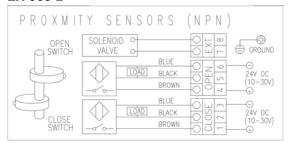

#### EX-900-6

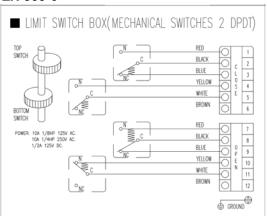

#### EX-900-3

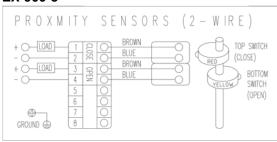


3



### **Product Structure**

- Parts name and structure (EX-900)

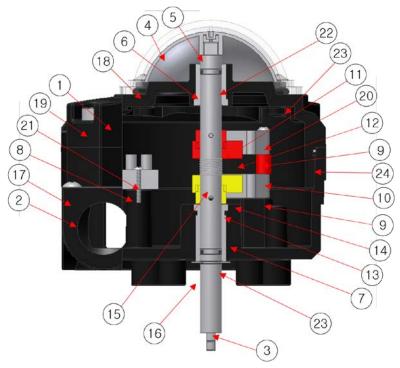

| No. | Name of Part            | Qty | Material  | No. | Name of Part           | Qty | Material  |
|-----|-------------------------|-----|-----------|-----|------------------------|-----|-----------|
| 1   | Cover                   | 1   | Aluminum  | 13  | Cam fixed base(Close)  | 1   | PC        |
| 2   | Body                    | 1   | Aluminum  | 14  | Cam(Close)             | 1   | PC        |
| 3   | Shaft                   | 1   | Stainless | 15  | Cam Spring             | 1   | SWPA      |
| 4   | Indicator Cover         | 1   | PC        | 16  | E Snap Ring            | 1   | Stainless |
| 5   | Indicator               | 1   | PC        | 17  | Ground Bolt            | 1   | Stainless |
| 6   | Cover Insert            | 1   | Bronze    | 18  | Indicator Cover Bolt   | 4   | Stainless |
| 7   | Body Insert             | 1   | Bronze    | 19  | Cover Bolt             | 4   | Stainless |
| 8   | Terminal Block          | 1   | PC        | 20  | Limit Switch Bolt      | 2   | Stainless |
| 9   | Limit Switch            | 2   | PC        | 21  | Terminal Block Bolt    | 2   | PC        |
| 10  | Limit Switch fixed base | 2   | PC        | 22  | Shaft O-ring           | 2   | NBR       |
| 11  | Cam fixed base(Open)    | 1   | PC        | 23  | Indicator Cover O-Ring | 1   | NBR       |
| 12  | Cam(Open)               | 1   | PC        | 24  | Body O-Ring            | 1   | NBR       |




## **Switch Adjustment**







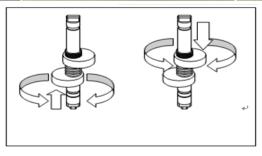

- 1. Loosen cover bolts (19) and remove cover (1).
- 2. Rotate actuator to full counter-clockwise position
- 3. Lift bottom cam (14) and turn until switch is activated and release
- 4. Push down top cam (12) and turn until switch is activated and release.
- 5. Please cover (1) back on and tighten cover bolts.

#### **Storage**

If not in use for a long duration, keep in a cool and dry space as well as block the entrance of electric wire to protect it from moisture and dust.

\*\*\* Radius does not assume the responsibility for any property damages or personal injuries caused by the User's operating faults or arbitrary design change & improper maintenance works\*\*\*

## **Customer support**

Address: 4922 Technical Drive Milford, MI 48381

Telephone: (248) 685-0773

Fax: (248) 685-0740

RADIUS EMAIL: SALES@RADIUS-ENG.COM

5